




GLASS HOUSE AU


Australian for Glass and Fencing

Installation Guide for Fixed panel shower screen

Included in your purchase

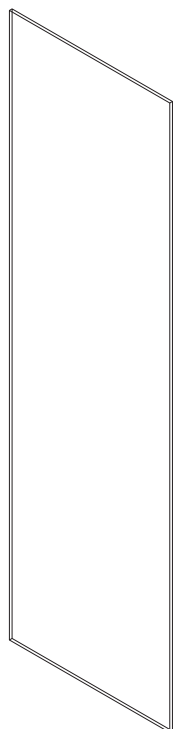

Fixed panel

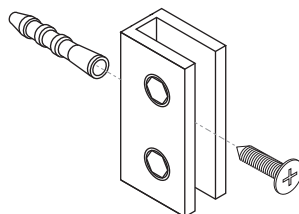

Wall Bracket


x2 if Wall Bracker Option



U Chanel

if channel option or extended wall channel option was selected


Caution

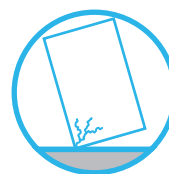

We highly recommend that only experienced or qualified individuals install frameless glass shower screens. Always ensure that two people are available to lift and position the glass.

Take care to prevent the glass from contacting any hard surfaces such as tiles, concrete, or metal. Always use packers or blocks to support the glass during installation.

Recommended Personal Protective Equipment (PPE)

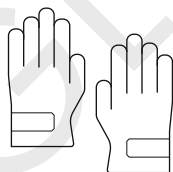

Safety gloves



Steel-toe capped boots




Safety goggles




Long-sleeved shirt and trousers

Thank you for your purchase. If you need any installation or technical advice, please don't hesitate to reach out to us at www.glasshouseau.com for a prompt response.


Recommended Tools for Installation

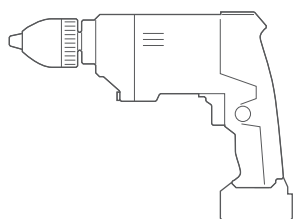

Cordless power drill

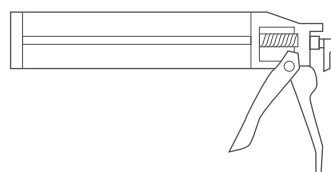

Silicone gun




Pencil




Phillips head screwdriver




6mm tile drill bit
(if installing on tiles)

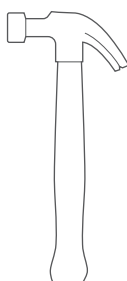

Hammer



Utility knife



Tape measure



Laser level or spirit level



Methylated spirits &
glass cleaner/Spray bottle

Optional fixing kit




Silicone spatula



Setting blocks




High-quality, mould-resistant
translucent silicone




Glass sucker
(optional for easier lifting)

Installation Instructions


Step 1

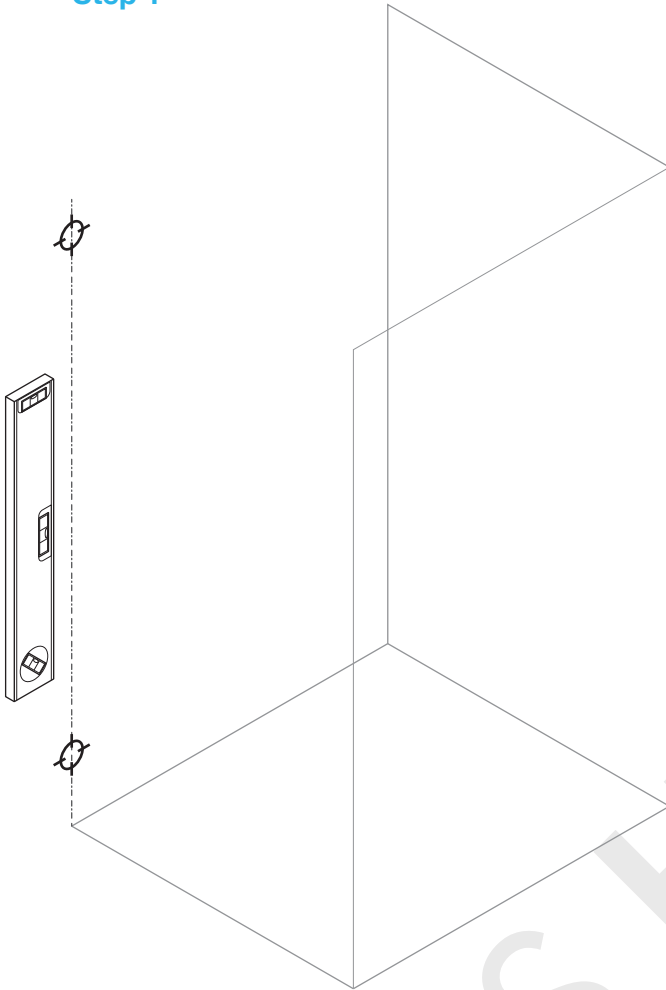

Use a laser level to show a level line on the wall where you will place the panel. If a laser level is not available, use a spirit level and mark your bracket position at the required heights. Or if using a wall channel, pre-drill the channel (if not already done) and place on the wall into position, ensure it is plumb, using a pencil mark the wall through the holes in the channel, we recommend 3 holes. 100mm down from the top, one in the middle and one 100mm up from the bottom




Step 2

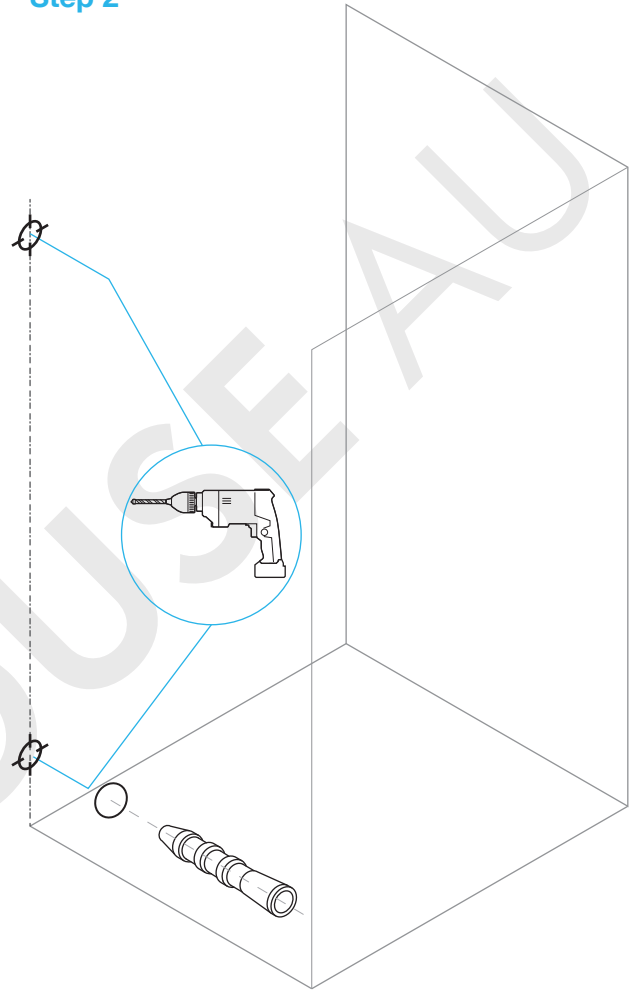


Drill a 6mm hole into the tile, taking care not to drill too deeply and risk hitting any pipes. Insert the included wall plug or your own, gently tapping it in place with a hammer if necessary. Trim any excess plug material with a utility knife.

Step 3

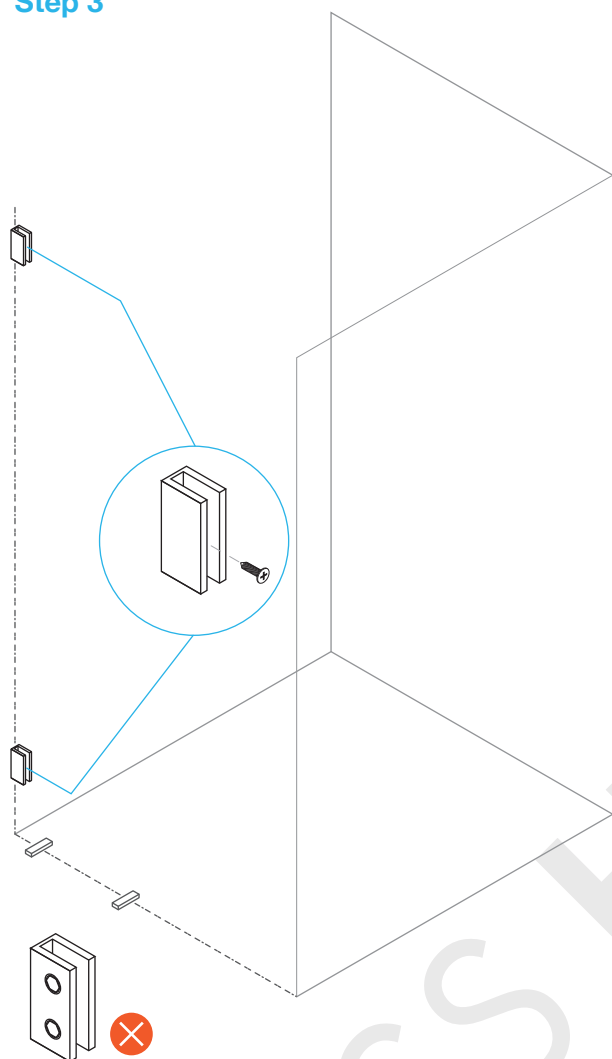


Screw the brackets (ensuring the screws are on the inside of the shower screen) or wall channel to the wall. Wipe down the wall and floor with a clean cloth and methylated spirits to remove any debris. Place setting blocks or packers on the floor where the hinge panel will sit.

Step 4

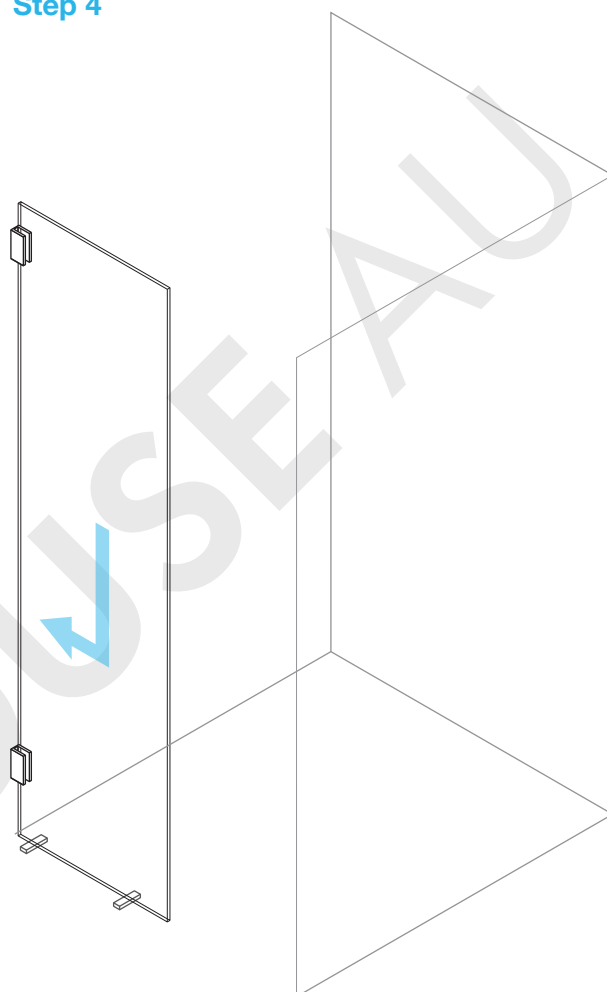


If installing with brackets, carefully slide the glass into the brackets, ensuring it does not touch the floor or wall tiles. Position the glass on the setting blocks or packers.

Step 5

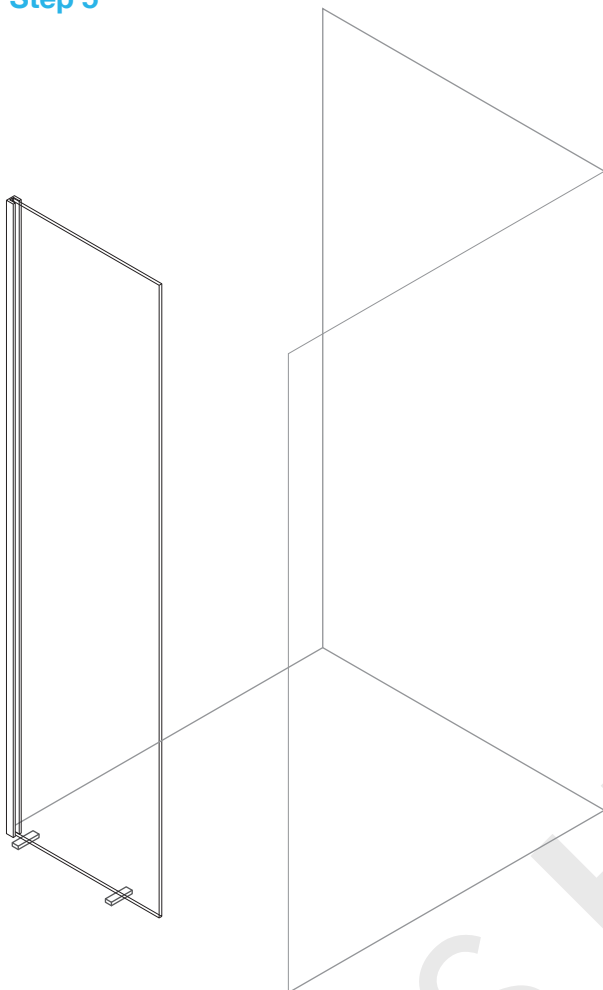


If installing with a wall channel, ensure the L-shaped rubber is securely in place inside the channel (tip: use tape to hold it in place). Slide the glass into the channel, taking care not to hit the wall or floor tiles, and position it on the setting blocks or packers.

Step 6

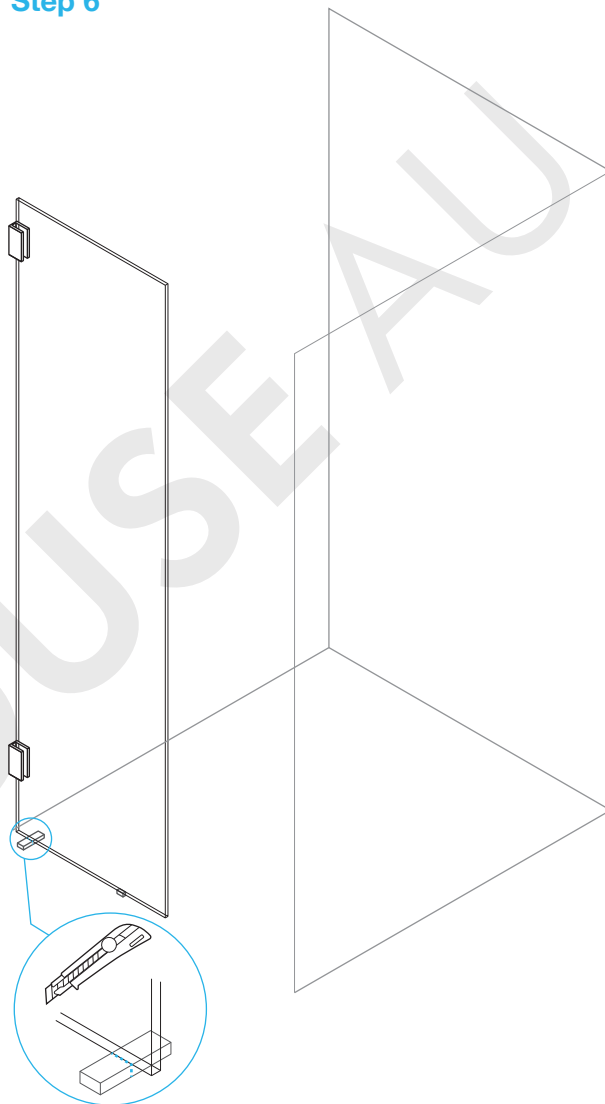


Trim the packers to be flush with the glass. If using your own packers, consider removing them once the silicone process is complete and filling the gap with silicone.

Sealing the Panel Step 7

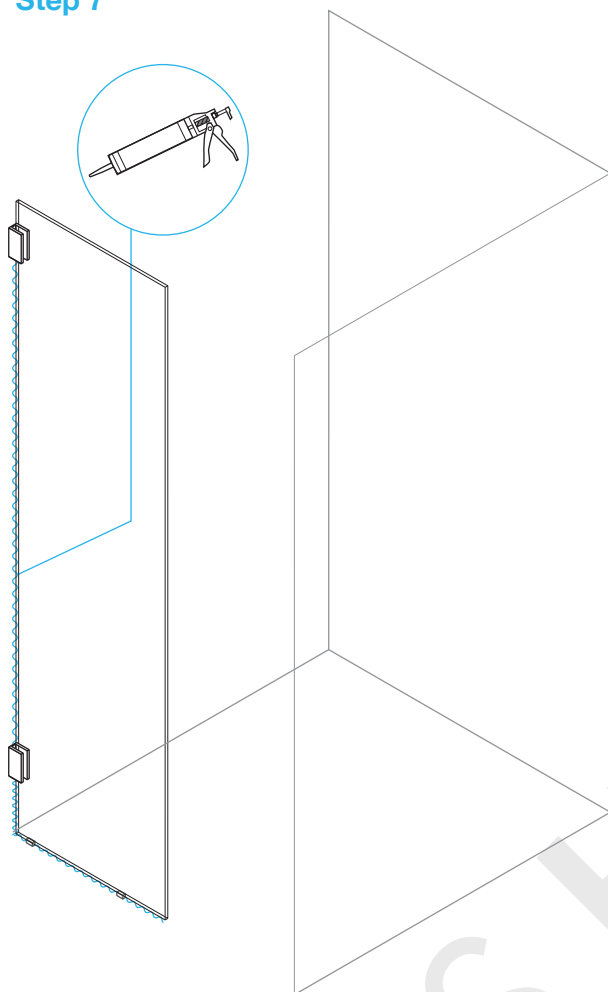

Apply mould-resistant, translucent bathroom silicone where the panel meets the wall and floor, both inside and outside, ensuring the gap between the glass and tiles is completely sealed with no air bubbles or holes. Spray the freshly applied silicone with a water and soapy solution or methylated spirits.

Step 8

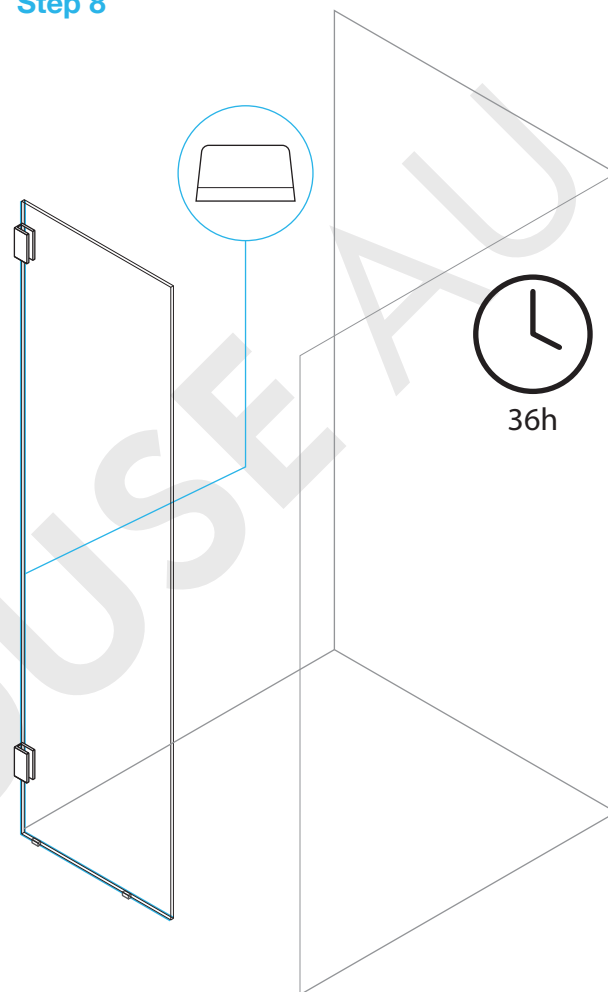



Use the included spatula to remove any excess silicone. Wipe the spatula clean with paper towels or a cloth as you work. The silicone will begin to "skin over" within a few minutes, so work quickly to achieve a smooth finish.

Important Note:

Allow the silicone to set for at least 36 hours before using the shower.

Congrats you have finish!

Step 9

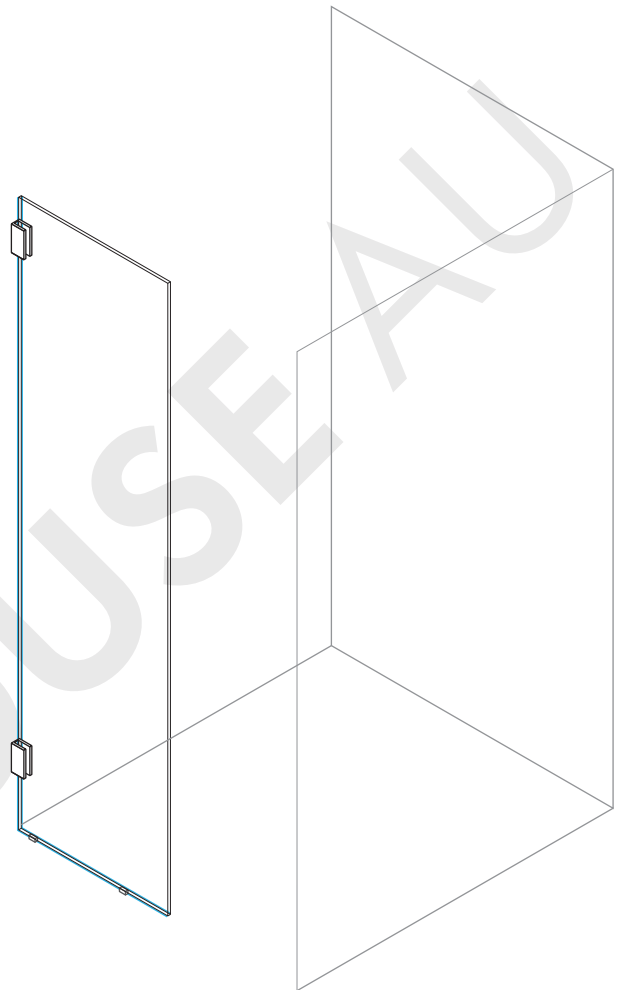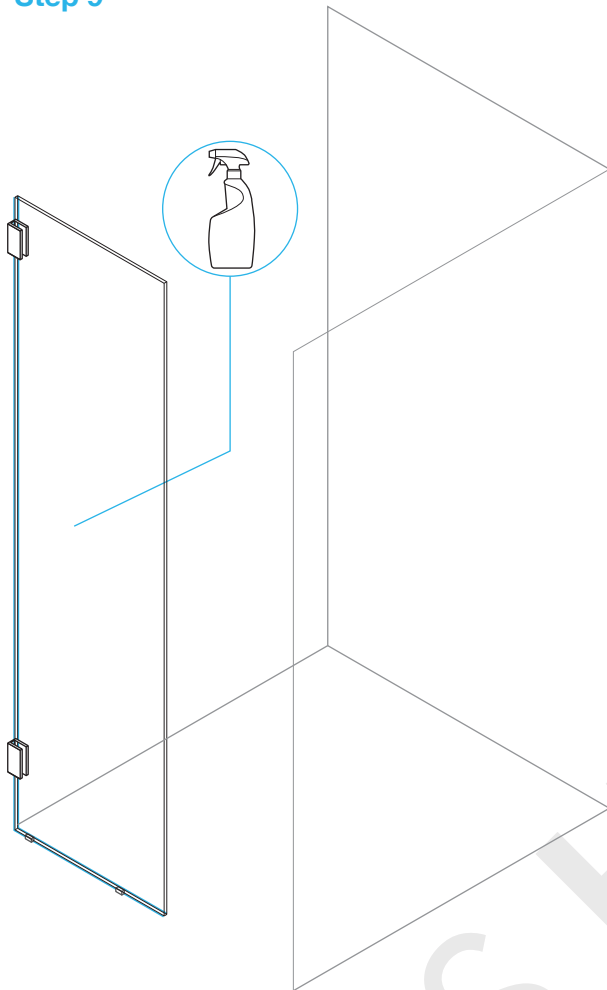

Clean the glass with methylated spirits or glass cleaner.
Consider applying the optional EnduroShield kit (instructions included in the kit).

Consider using a support arm if the glass is over 1200mm wide, (Needs to be purchased separately)



www.glasshouseau.com